

OBD Scanner Walk Around



What it does: Diagnoses any mechanical problem(s) on the vehicle so you can create an accurate appraisal.

- 1. Before you begin, open the Accu-Trade app. Download and allow the device permissions.
- 2. Associate your OBD Scanner with the VinTel® Module (full directions here).
- 3. Open the Accu-Trade Appraisal Application. Scan the VIN Number on the vehicle with your mobile device.
- 4. OBD Scanner Steps
 - a. Start the vehicle.
 - b. Insert OBD Scanner in the OBD port. This is typically located below the steering wheel column. The OBD Scanner will emit a flashing red light as it reads the vehicle's mechanical issues. This process can take up to 20-40 seconds to complete, depending on the complexity of the VIN.
 - c. Once the light turns green, the scan is complete.
- 5. The app will connect to the module and send the diagnostic information in the cloud. From there, you will be able to access the Diagnostic Status Report (DSR).
- 6. Within seconds, you can access VinTel© within the Accu-Trade appraisal. Once available, you should be able to click on the green or red VinTel© icon within the application (or). Green notates that the vehicle has little to no issues, and red notates major mechanical issues.

Sources

- Introducing VinTel[®] with AccuTrade (Full)
 - Runtime: 31:10
- VinTel© QuickStart with Accu-Trade